



Bubble Tent Rules and Safety Guidelines

- 1. Adult Supervision:** Adult supervision is mandatory at all times while the Bubble Tent is in use.
- 2. No Shoes:** Shoes are strictly prohibited inside the Bubble Tent to prevent damage to the inflatable material.
- 3. No Sharp Objects:** Keep all sharp objects away from the Bubble Tent, both inside and in the surrounding area, to prevent punctures.
- 4. Limit Capacity:** Adhere to the specified capacity limit to ensure proper functioning of the Bubble Tent. Blocking the inlet with too many participants may impede the movement of the balloons.
- 5. No Rough Play:** Rough play, jumping, or any activity that may cause unnecessary stress to the Bubble Tent is strictly prohibited.
- 6. Wind Conditions:** The Bubble Tent is sensitive to wind conditions. Do not operate it in wind speeds exceeding 15 mph to avoid potential damage.
- 7. No Facepaint Allowed:** Facepaint is not allowed inside the Bubble Tent to prevent staining or damage to the inflatable material.
- 8. Zipper Doors:** When entering or exiting the Bubble Tent, always keep at least one zipper door closed to prevent rapid deflation.
- 9. Partial Zippering:** Both doors should never be completely closed; always leave them slightly unzipped to allow for proper air circulation.
- 10. Rain Precautions:** If rain occurs, immediately turn off the blower and ensure all participants exit the Bubble Tent to prevent damage and ensure safety.

